


USER GUIDE: MinMax & MinMax Plus

Congratulations you have just purchased the worlds most advanced [MIN/MAX thermometers](#) and these can be used easily by following single button instructions as below!

Using the **START** button you can:

1. Start the unit by holding the button down firmly for 1 second. It states "Set" on the display beforehand and you can see moon icon which will disappear after starting. Once started it shows current temperature and the Current Min/Max readings.
2. Freeze the display when the unit is running, press and hold the **START** button for 1 second to freeze. The display (LCD will display moon icon next to MIN) will freeze. The button must be pressed well and for 1 full second
3. Refresh: After freezing the display you can unfreeze or refresh it by pressing and holding the Start button for 2-3 full seconds. (LCD will hide moon icon when the logger refreshes the display). Time is critical 2-3 seconds no more or no less. Minimum and maximum temperature value will restart from current temperature.

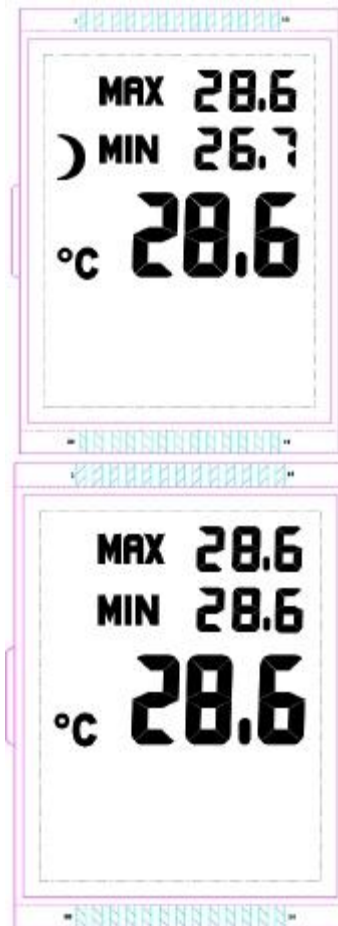

The [MIN/MAX Thermometers](#) is also a datalogger with background memory on a loop and will record data for set time before overwriting the oldest data. If you require the stored data you can send them back to Scigiene for reading or purchase software and interface to read and program on your own!

Using our [Maxithermal software](#) you can download the data for graphing, charts and reports as well as reprogram the units for different alarms limits or reading intervals.



1295 Morningside Ave Units 16, 17, & 18
Toronto ON M1B 4Z4 Canada
Telephone: 416-261-4865 Fax: 416-261-7879
www.scigiene.com