



1295 Morningside Avenue, Unit 16-18  
Scarborough, ON M1B 4Z4 Canada  
Phone: 416-261-4865 Fax: 416-261-7879  
[www.scigiene.com](http://www.scigiene.com)

# Scigiene Reference Thermometer

Part# RD0370R

## Instruction Manual



## Table of Contents

Features.....	3
Specifications.....	3
Instrument Description.....	4-5
Operating Instructions.....	6-7
Temperature Measurement.....	8
Battery Replacement.....	8
Product Maintenance.....	9

## Features


Scigiene RD0370R is a high accuracy certified RTD thermometer accurate to better than  $\pm 0.1^{\circ}\text{C}$ . It includes a full 3-point N.I.S.T traceable certificate at 3 points over  $-20^{\circ}\text{C}$  to  $100^{\circ}\text{C}$ .

- Includes 3 point N.I.S.T traceable certificate
- IP67 waterproof housing
- Platinum resistor temperature sensor requires less temperature compensation than thermocouple units
- 4-digit LCD readout with LED backlight
- $^{\circ}\text{C}/^{\circ}\text{F}$  switchable
- Min/Max/Avg functions
- Relative mode and Data Hold
- Low battery indication with auto power-OFF
- Includes a pointed 4.5" Stainless Steel RTD probe

## Specifications

- Temperature Range:  $-100^{\circ}\text{C}$  to  $+300^{\circ}\text{C}$  ( $-148^{\circ}\text{F}$  to  $+572^{\circ}\text{F}$ )
- Resolution:  $0.1^{\circ}\text{F}/^{\circ}\text{C}$
- Accuracy:  $\pm 0.1^{\circ}\text{C}$  over  $-20$  to  $100^{\circ}\text{C}$
- Sensor Types: Platinum resistance for Pt-100, Pt-500, Pt-1000 (4 wires) selectable
- Power Supply: 3 x 1.5V AAA alkaline batteries
- Battery Life: Approximately 100 hours


## Instrument Description

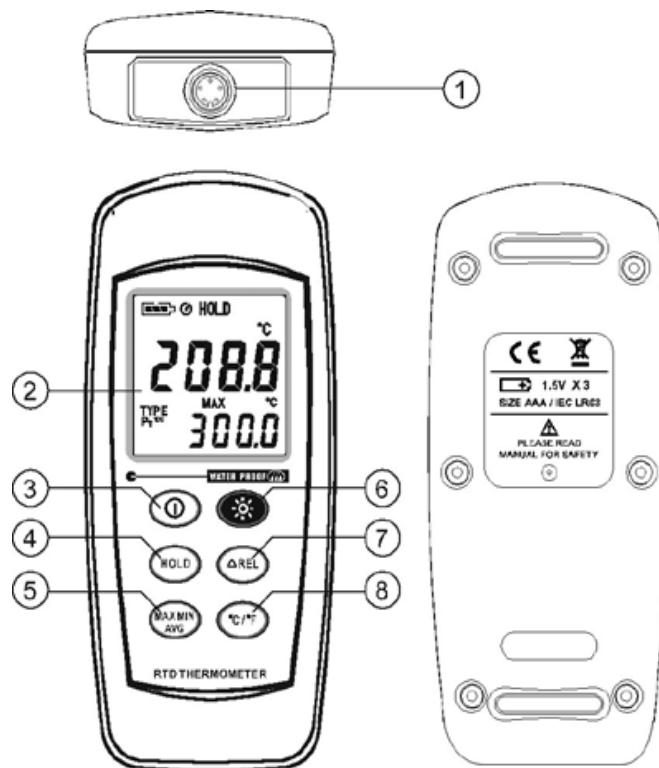



- 1 — Pt type temperature sensor connector
- 2 — LCD display
- 3 — Power ON/OFF button
- 4 — HOLD button
- 5 — MAX/MIN/Average control button
- 6 — Back light button
- 7 — Relative readout button

Display

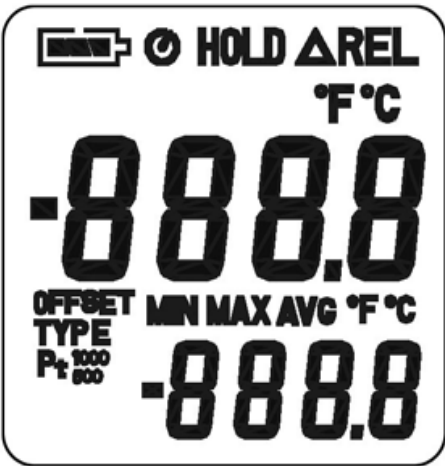Symbol definitions and button locations



-	This indicates that the minus temperature is sensed
°C/°F	Celcius and Fahrenheit indication
Pt xxx	Platinum Type Indication
HOLD	This indicates that the display data is being held
MAX	The Maximum value is being displayed
MIN	The Minimum value is being displayed
AVG	The Average value is being displayed
ΔREL	The reading is under Relative Mode
	The battery power level indication
	This indicates Auto Power Off is enabled


## Operating Instructions

### Turning the meter on

Press the ① button to turn the thermometer ON or OFF.

### Connecting the temperature probe

For measurement, plug the temperature probe into the input connectors.

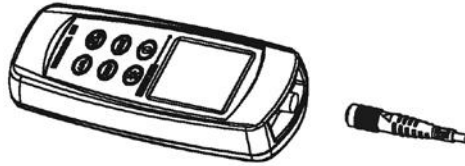


### Selecting the Temperature Scale

When the meter is first turned on, the default setting is set to the Celsius (°C) scale. It can be changed to Fahrenheit (°F) by pressing “°C/°F” button and vice versa back to Celsius.

### Data-Hold Operation

To hold the present reading and keep it on the display, press the “HOLD” button. When the hold data is no longer needed, release the data-hold operation by pressing “HOLD” button again.

When the meter is under Data Hold operation, the “△REL”,  and “°C/°F” buttons are disabled.


### Back Light Operation

Press the “Back Light” button to turn the back light on, press it once again to turn it off. The meter will turn the back light off automatically if the “Back Light” button is not pressed after 10 seconds.


### Relative Operation


When the “△REL” button is pressed, the meter will memorize the present reading and the difference between the new reading and the memorized reading and the result will be shown on the display. Press the “△REL” button again to exit the relative operation.


### MAX/MIN/AVG Operation


When the  button is pressed, the meter will enter the MAX/MIN/AVG mode. Under this mode the maximum value, minimum value and average value will appear simultaneously. The average value is calculated using the last 8 readings from the memory, it will update with every new reading.


When the MAX symbol is displayed, the Maximum value is shown on the display.


Press  again and the MIN symbol is on the display and also the minimum reading.

Press  again and the AVG symbol is on the display as well as the average reading.

Press  again and the MAX, MIN and AVG will blink together. This means that all these readings are updated in the memory and the reading is the current temperature.

Press  to circulate the display mode among these options.

When the meter is under  operation, the “ $\Delta$  REL” and “°C/°F” functions are disabled.

To exit the MAX/MIN mode, press and hold  for two seconds.




### **Auto Power Off**

By default, the meter is in auto power off mode. The meter will power itself off after 30 minutes without operation.

To disable the auto power off, press and hold the “HOLD” button and turn the meter on. There will be two successive beeps to indicate that the auto power off has been disabled.

### **Low Battery**

This meter indicates the battery power level directly on the display. Use this reference guide to establish battery power level.

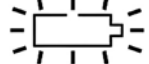	Battery power level is FULL, you can still take measurements.
	Battery power level is LOW, the battery will need to be replaced, you can still take measurements.
	Battery power level is EMPTY, the batteries need to be replaced (size AAA, 1.5V x 3). You can no longer take measurements.



For complete instructions on how to replace the batteries see page 8.

## Temperature Measurement

### Correct Measurement Method

The temperature sensor is located at the end of the metal sheath of the sheath type temperature probe. To accurately test internal temperatures, insert the probe to a distance of at least 15 times the diameter of the sheath directly into the item you want to measure.

### Connector Configuration

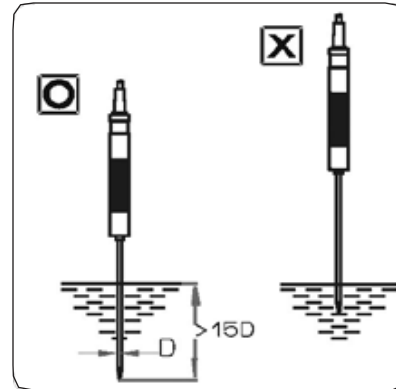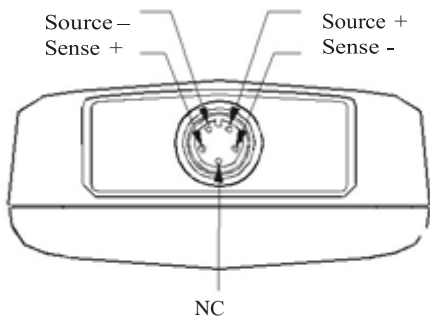


## Battery Replacement

- 1) Remove all of the back cover screws to be able to remove the cover.
- 2) Verify the polarity of the batteries and install the new LR03 (AAA size) alkaline batteries into the instrument.
- 3) Replace cover properly onto the meter and tighten screws.



The unit's back cover is fitted with rubber rings. After replacing the batteries, check that the rubber rings are properly placed before reinstalling the back cover. Improper placement of the rubber rings will compromise the unit's water-resistant structure, and possibly result in damage to the meter.

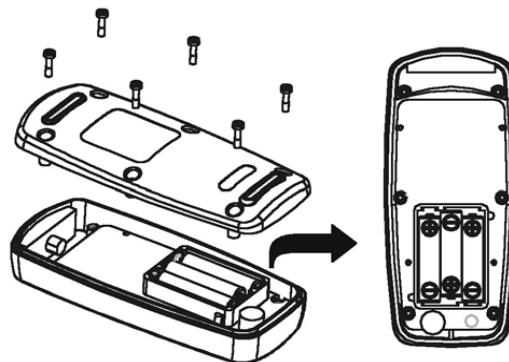



## Product Maintenance

In order to ensure the accuracy of the thermometer for a long period of time it should be calibrated once a year. For service (repairs or calibration) on this or any other products, contact Scigiene at 416-261-4865 or visit our website at: [www.scigiene.com](http://www.scigiene.com)

Clean the device and the window of the display with a clean, lint-free, antistatic and dry-cleaning cloth.




Do not use cleaning agents that contain carbon or benzenes, alcohol or anything similar to clean the meter as these substances will damage the surface of the meter.

Do not use tools with sharp edges, screwdrivers, metal brushes or anything similar to clean the meter.

### Temperature Probe

*Piercing type  
temperature probe*

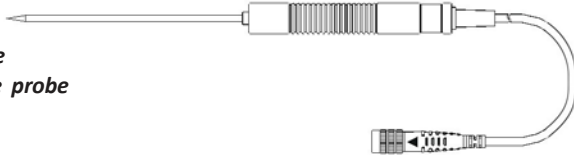

#### *Piercing type temperature probe Specification*

Sensor Type	Platinum resistance thermometer sensor Pt 100 (4 wires) IEC751, class A
Accuracy	+/- 0.15°C +/- 0.002 measurement temperature
Measurement Range	-100 to 400°C
Temp. Sensor Dim.	Approx. 3.2mm (0.125")
Temp. Sensor Length	Approx. 120mm (4.72")
Cable Length	Approx. 1100mm (43.3")
Water-resistant	EN60529:1991, IP67



1295 Morningside Avenue, Unit 16-18  
Scarborough, ON M1B 4Z4 Canada  
Phone: 416-261-4865 Fax: 416-261-7879  
[www.scigiene.com](http://www.scigiene.com)

